



Inst

Vi5 Nail Fin Window Installation

Index

Materials and tools - 2
Opening prep - 2
Window Installation - 3

Tools Needed

- Impact driver
- Caulking gun
- Level
- Tape measure




Materials Needed

- Sealant
- Plastic shims in various thickness (1/32" - 1/4")
- 1 1/2" self tapping washer head screws
- Spray foam
- Flashing tape

Opening Prep

Flashing


1. Apply flashing at the sill extending 6" up the sides, and overlapping 6" on the wall
2. Apply flashing to the sides overlapping the upturn at the sill
3. Apply flashing at the head

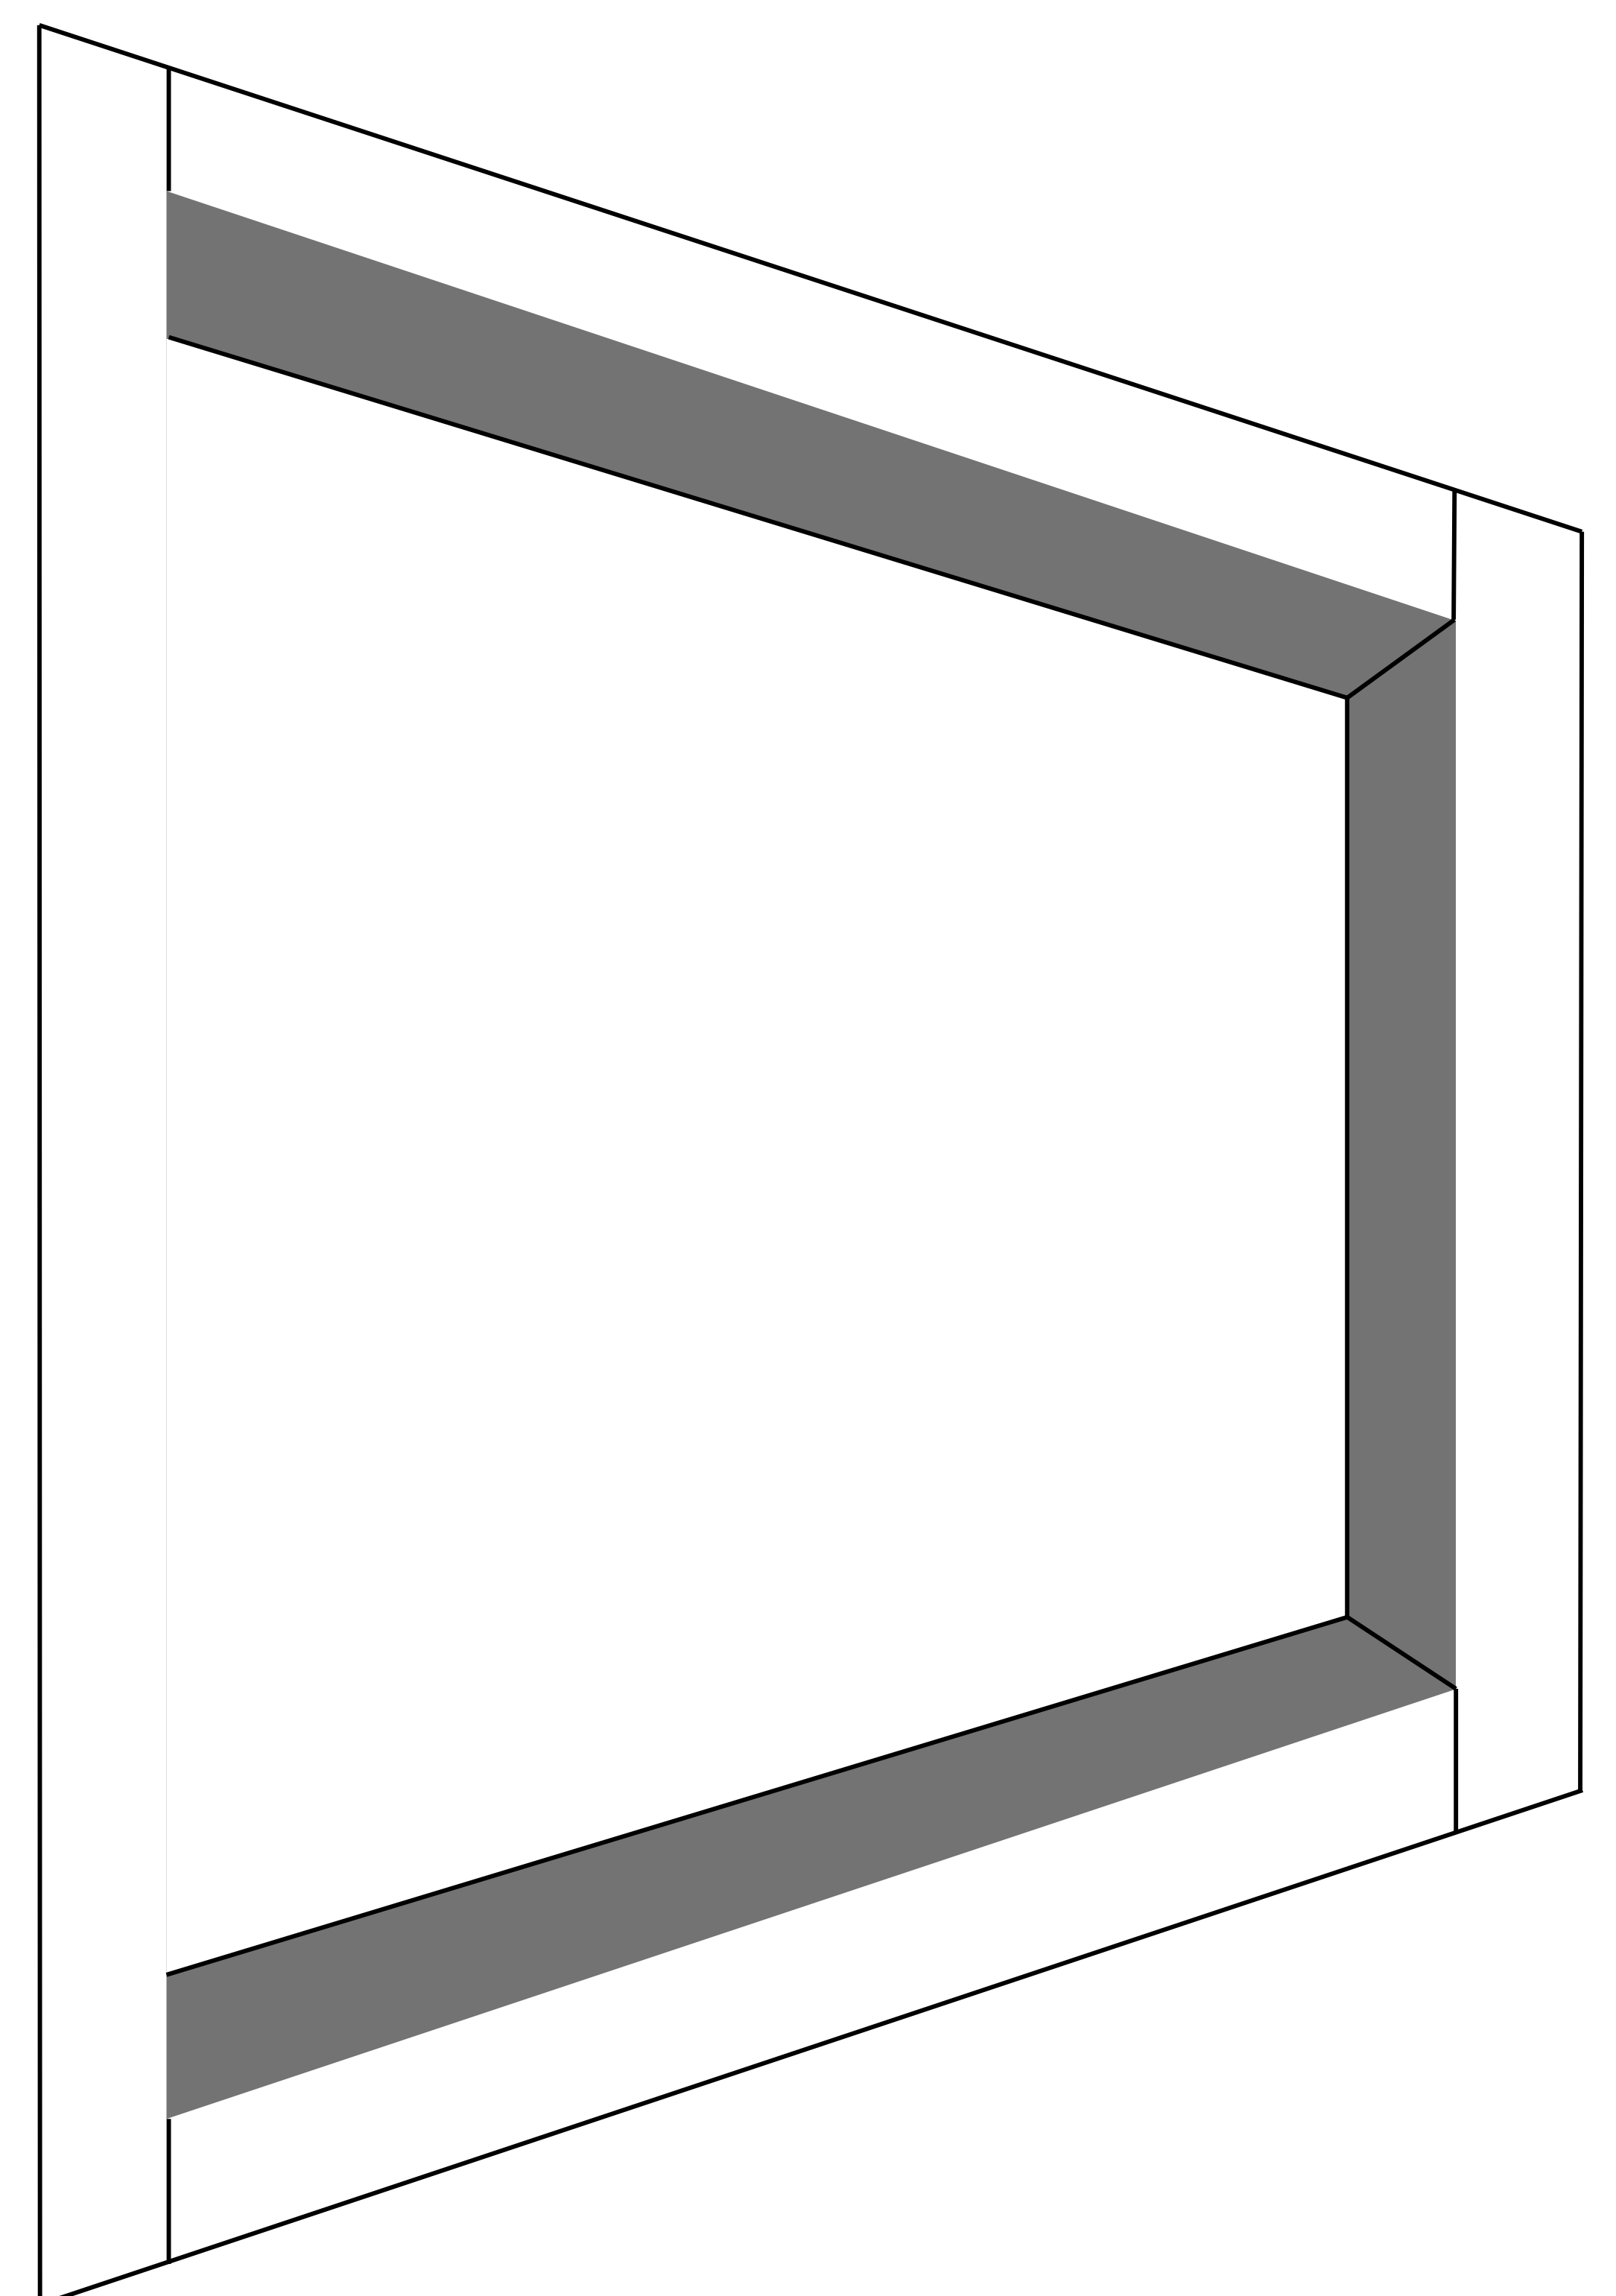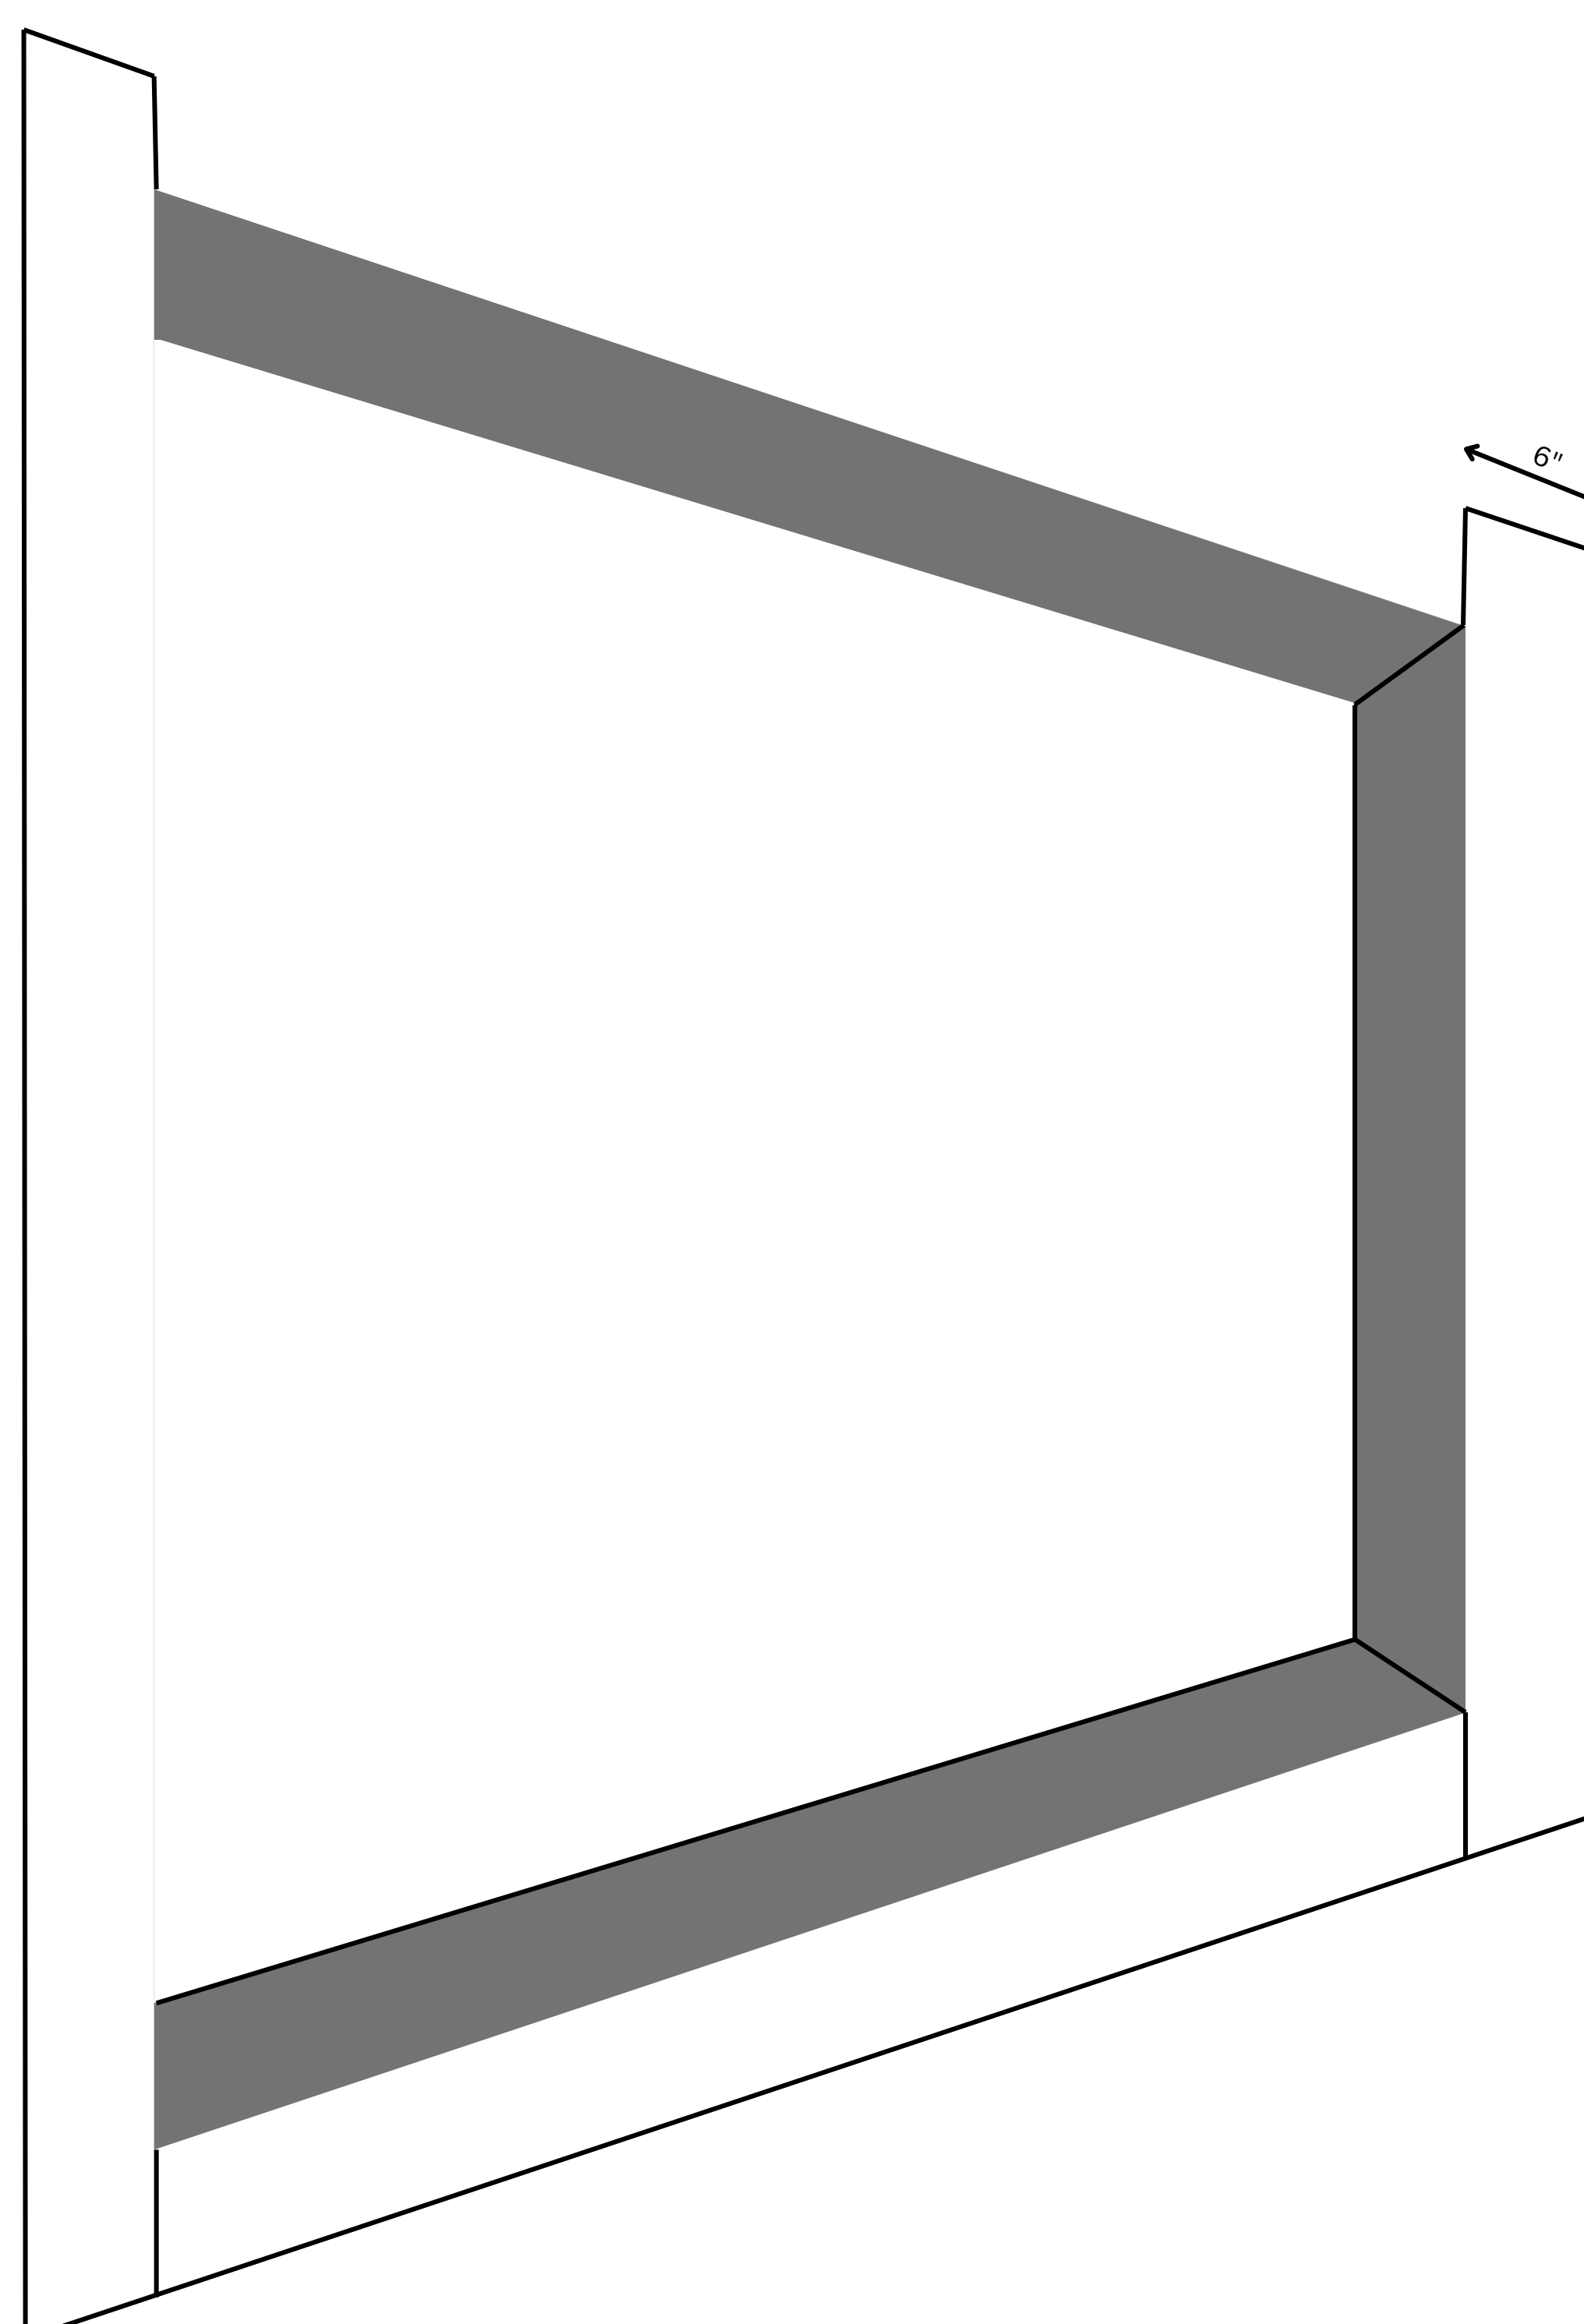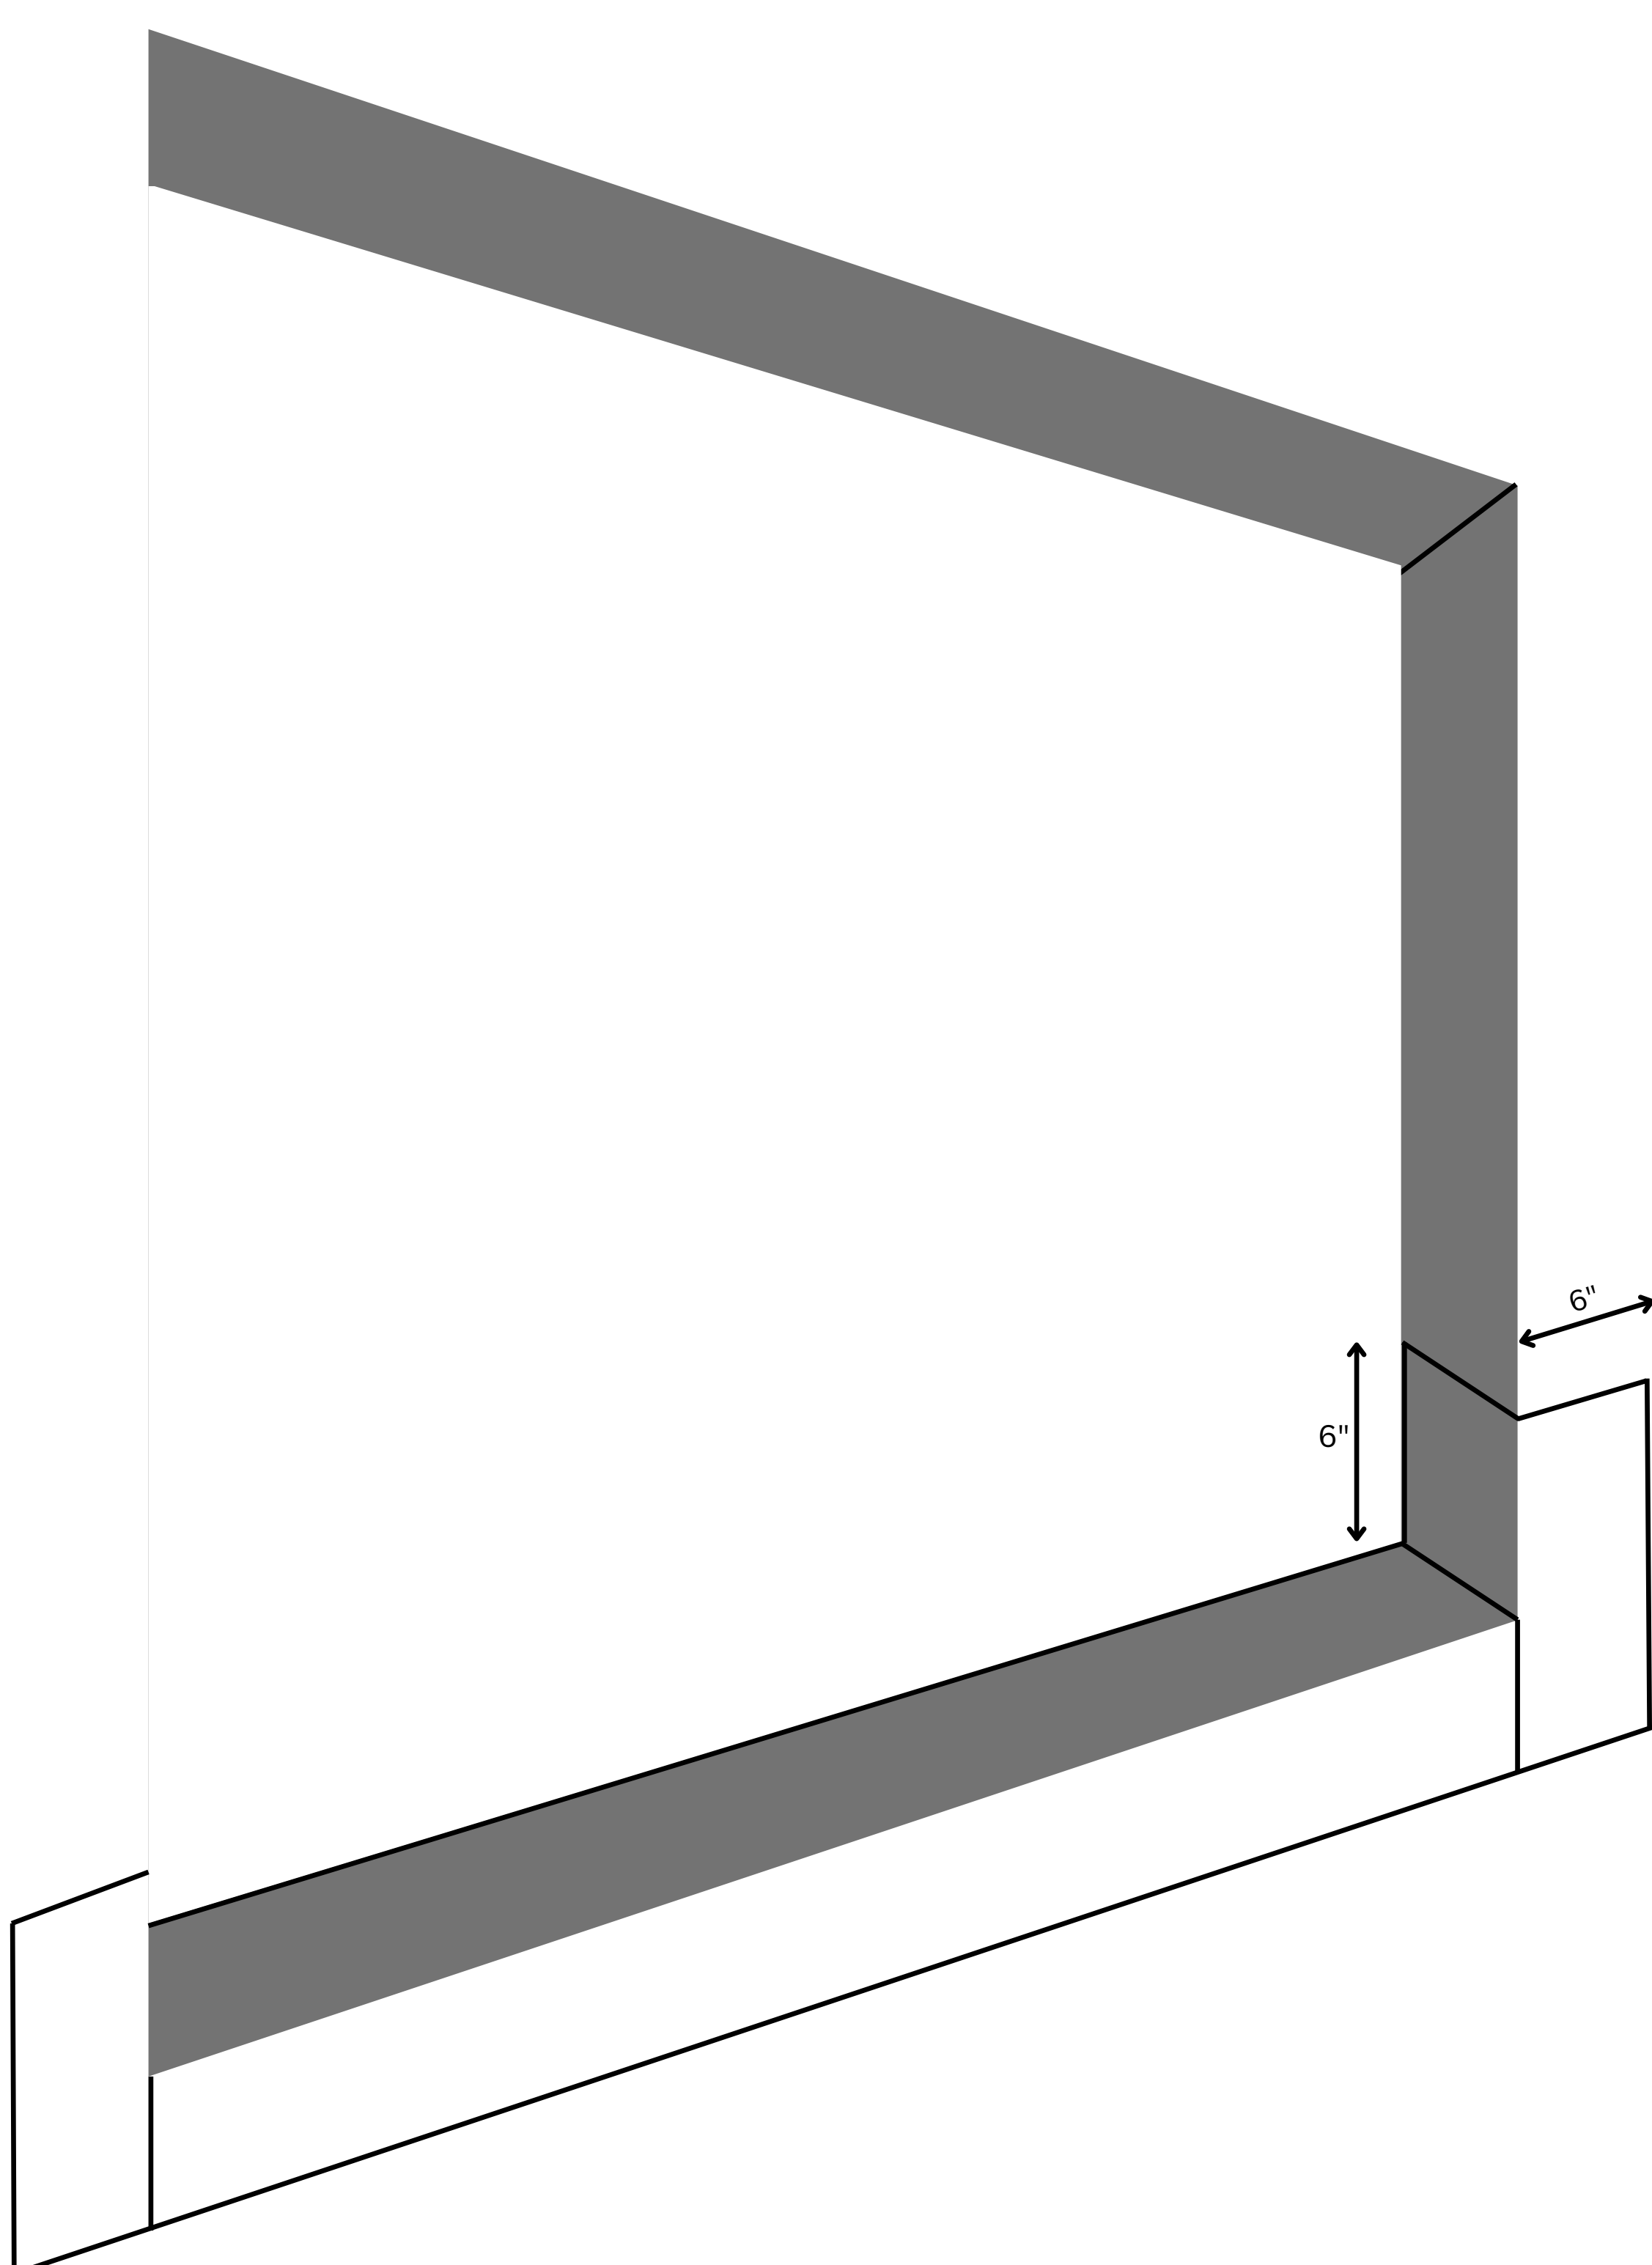


Window Installation

Placement

- 1. Apply sealant at the inside of the nail fin

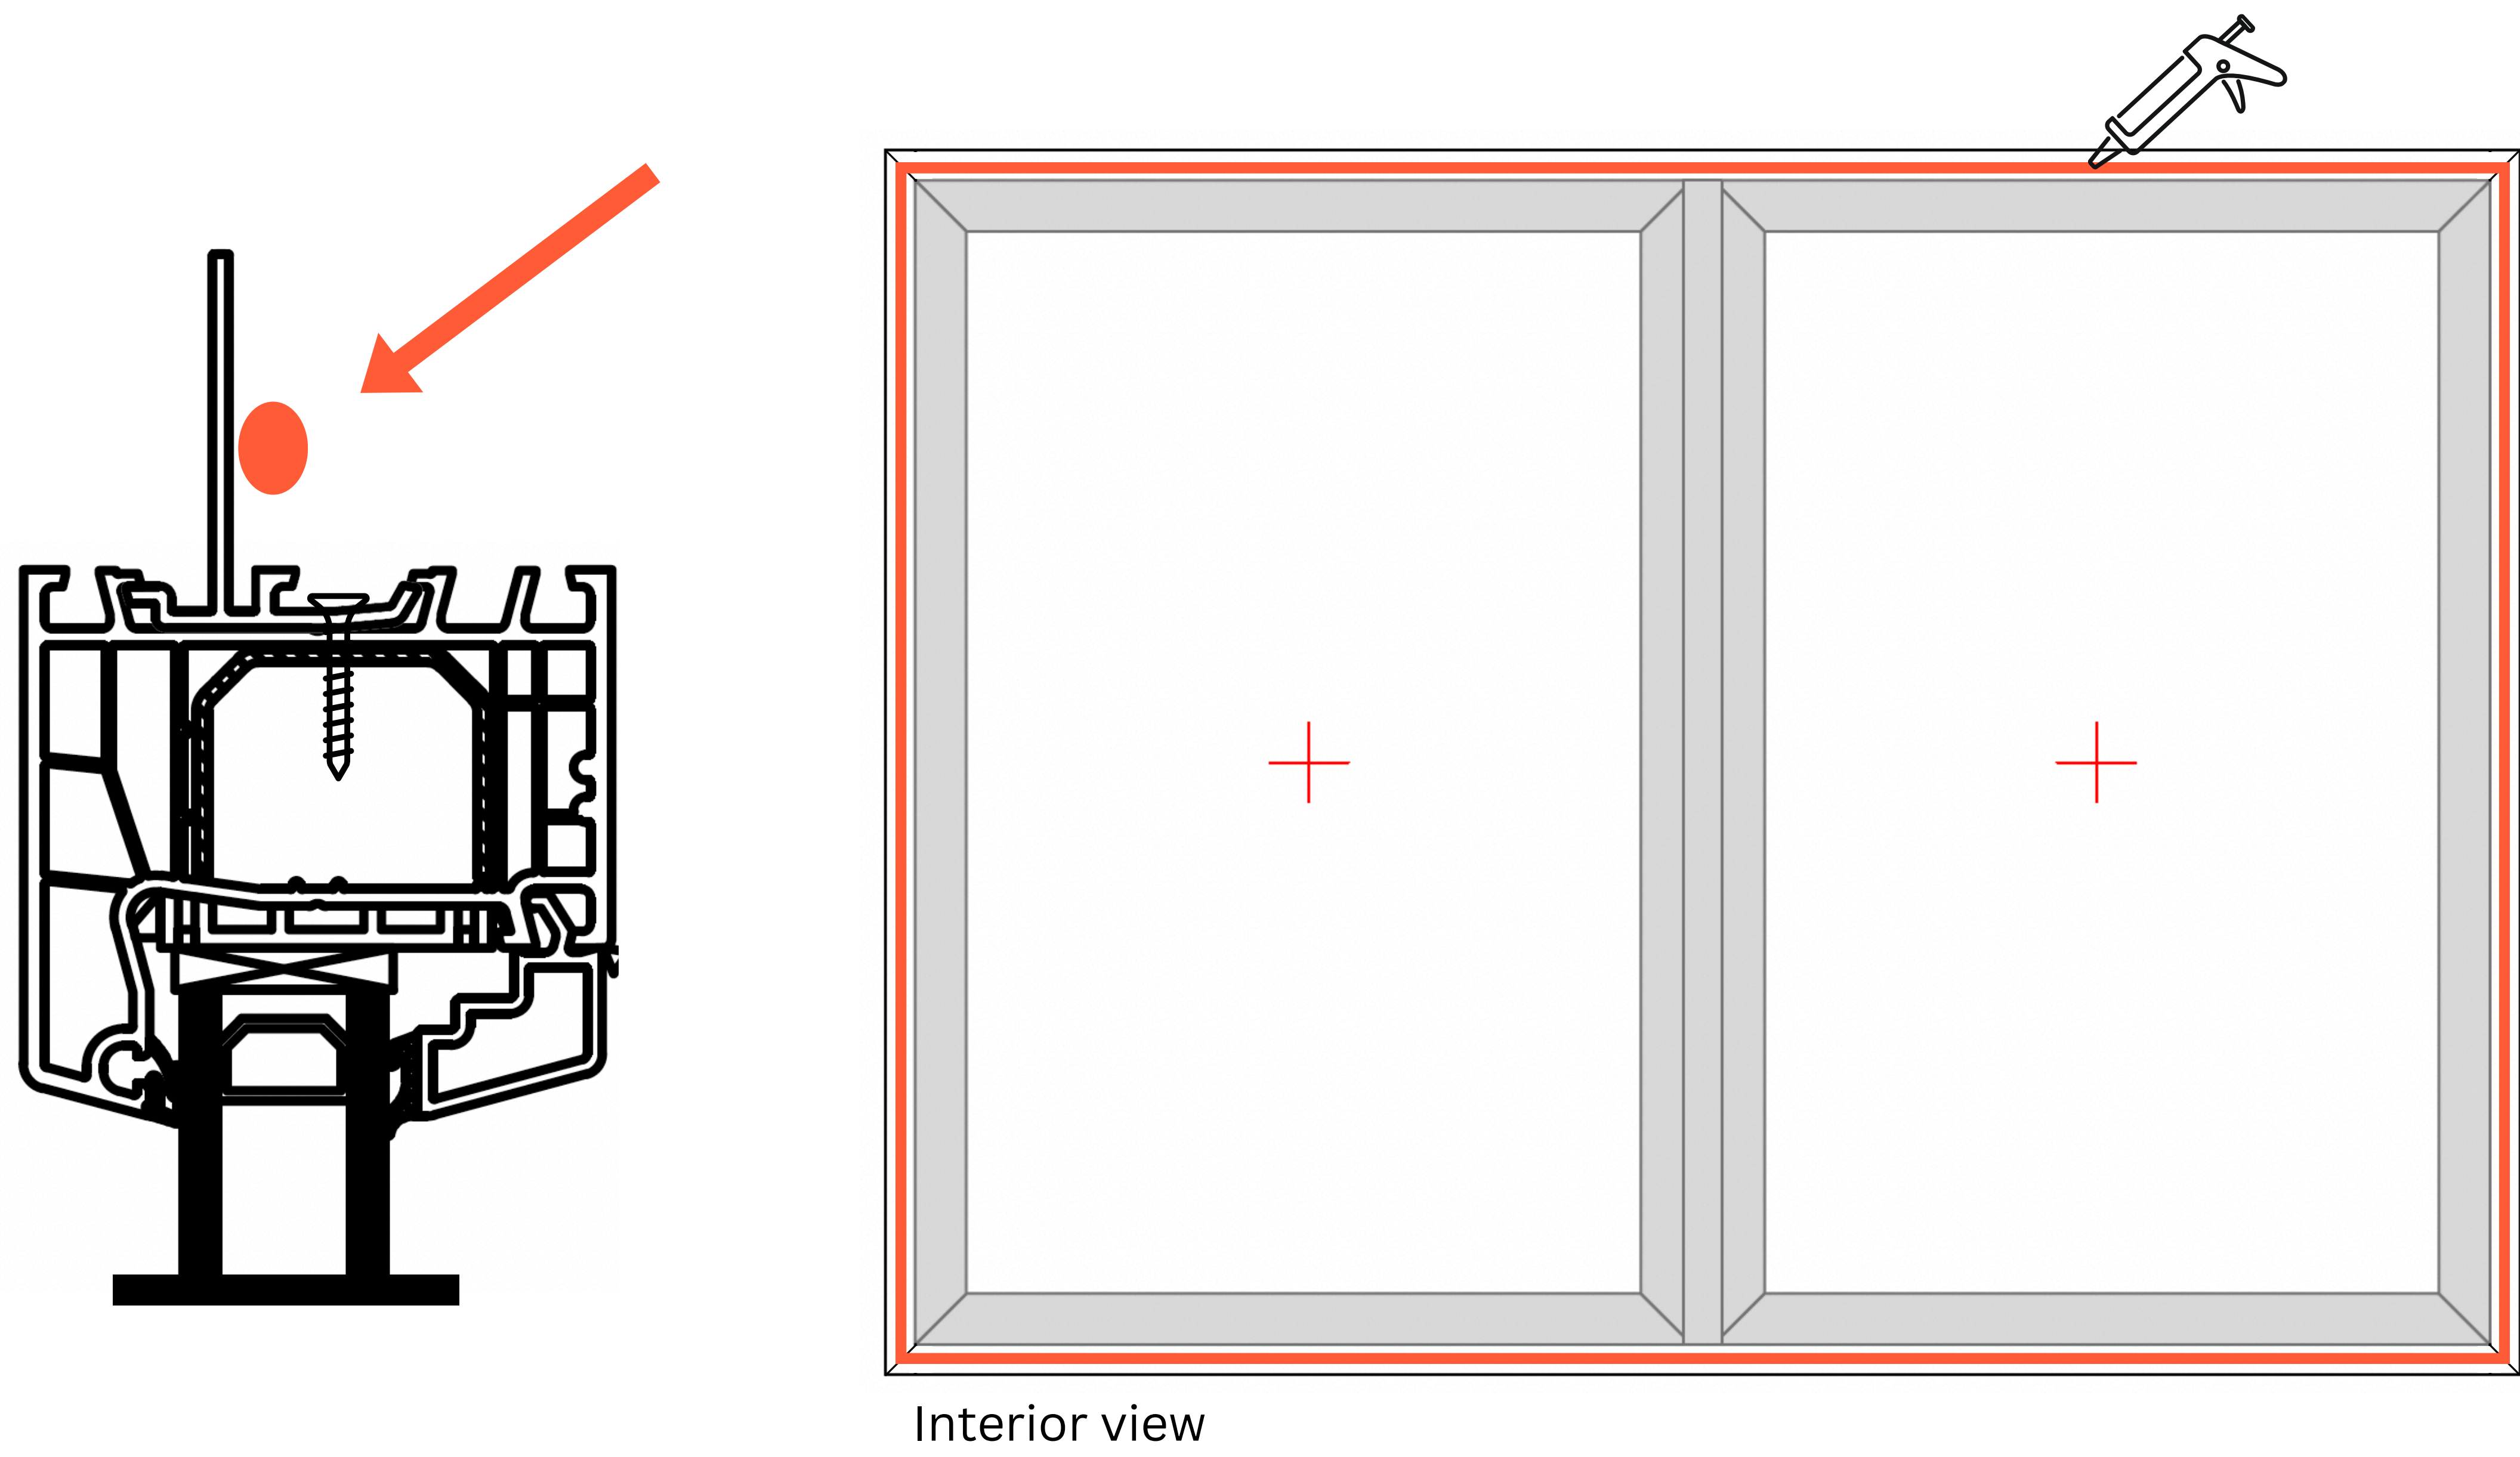


- 2. Place window into the prepared opening from the exterior and push in until the nail fin is flush with the exterior wall

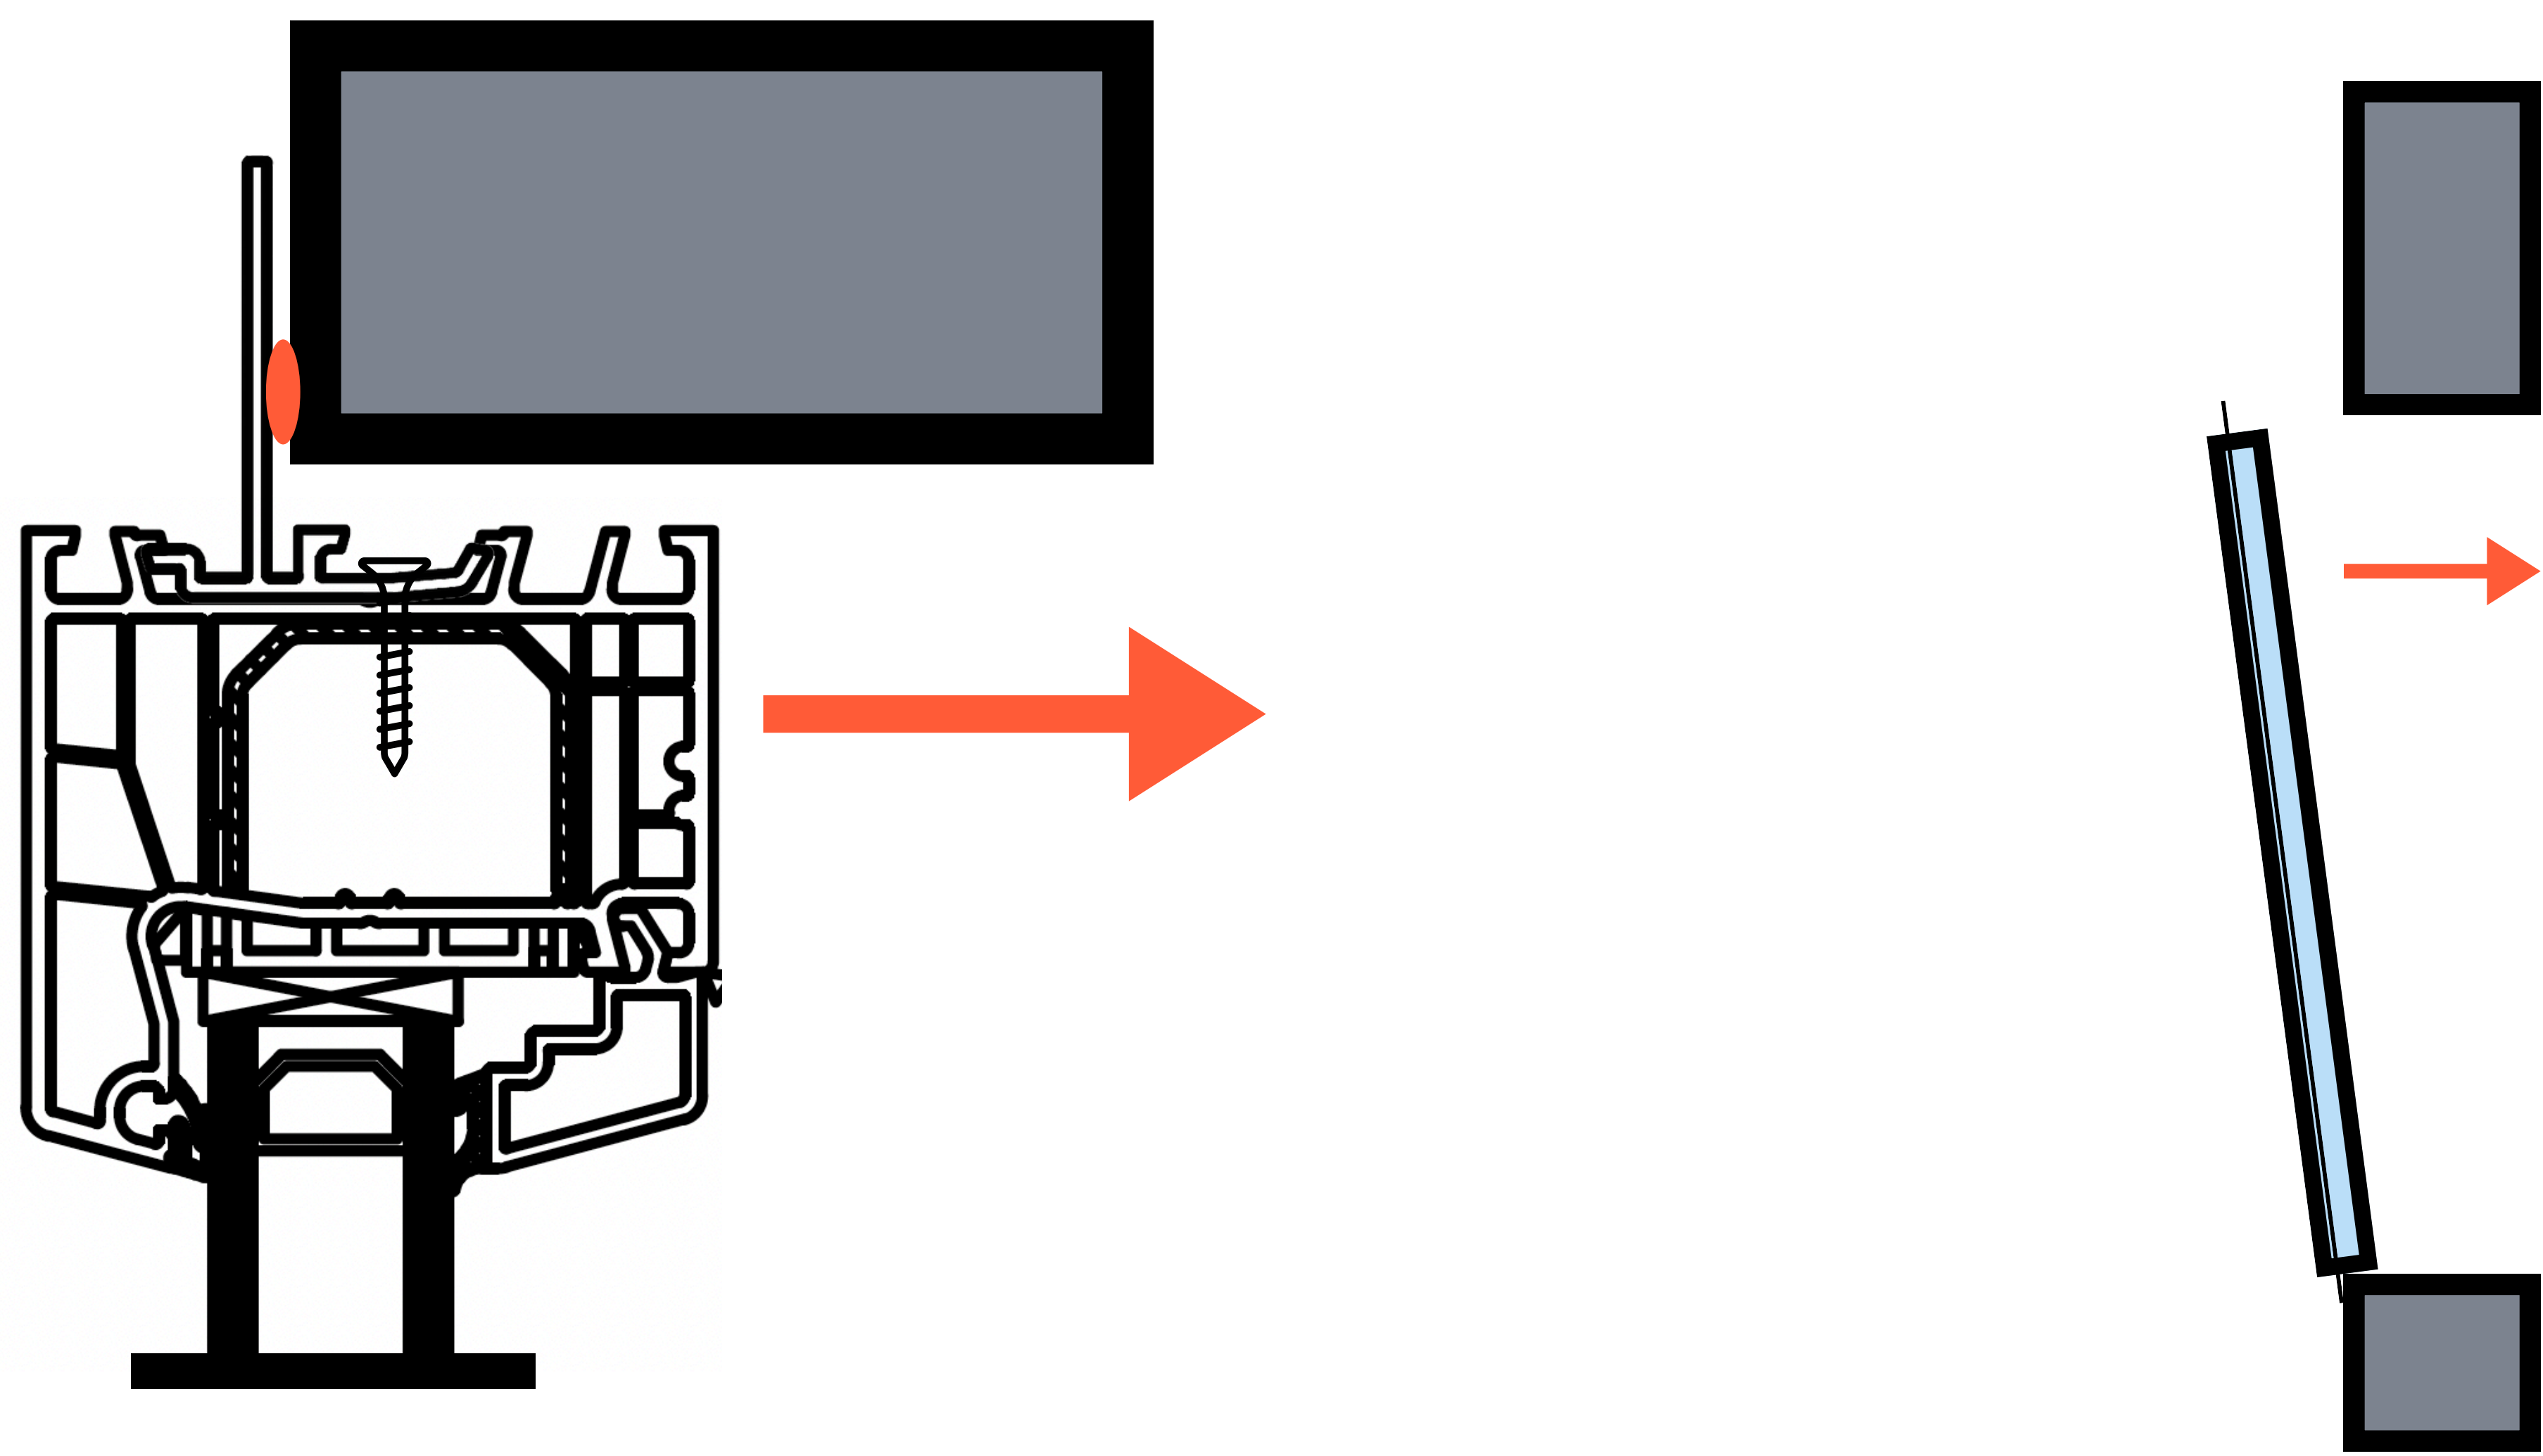

Shim Locations

Level the unit and place shims at the locations below, using plastic shims

Place shims 3" from every corner, and at each post, maximum span without shims should be 24" at the sill, and 36" at the sides and head

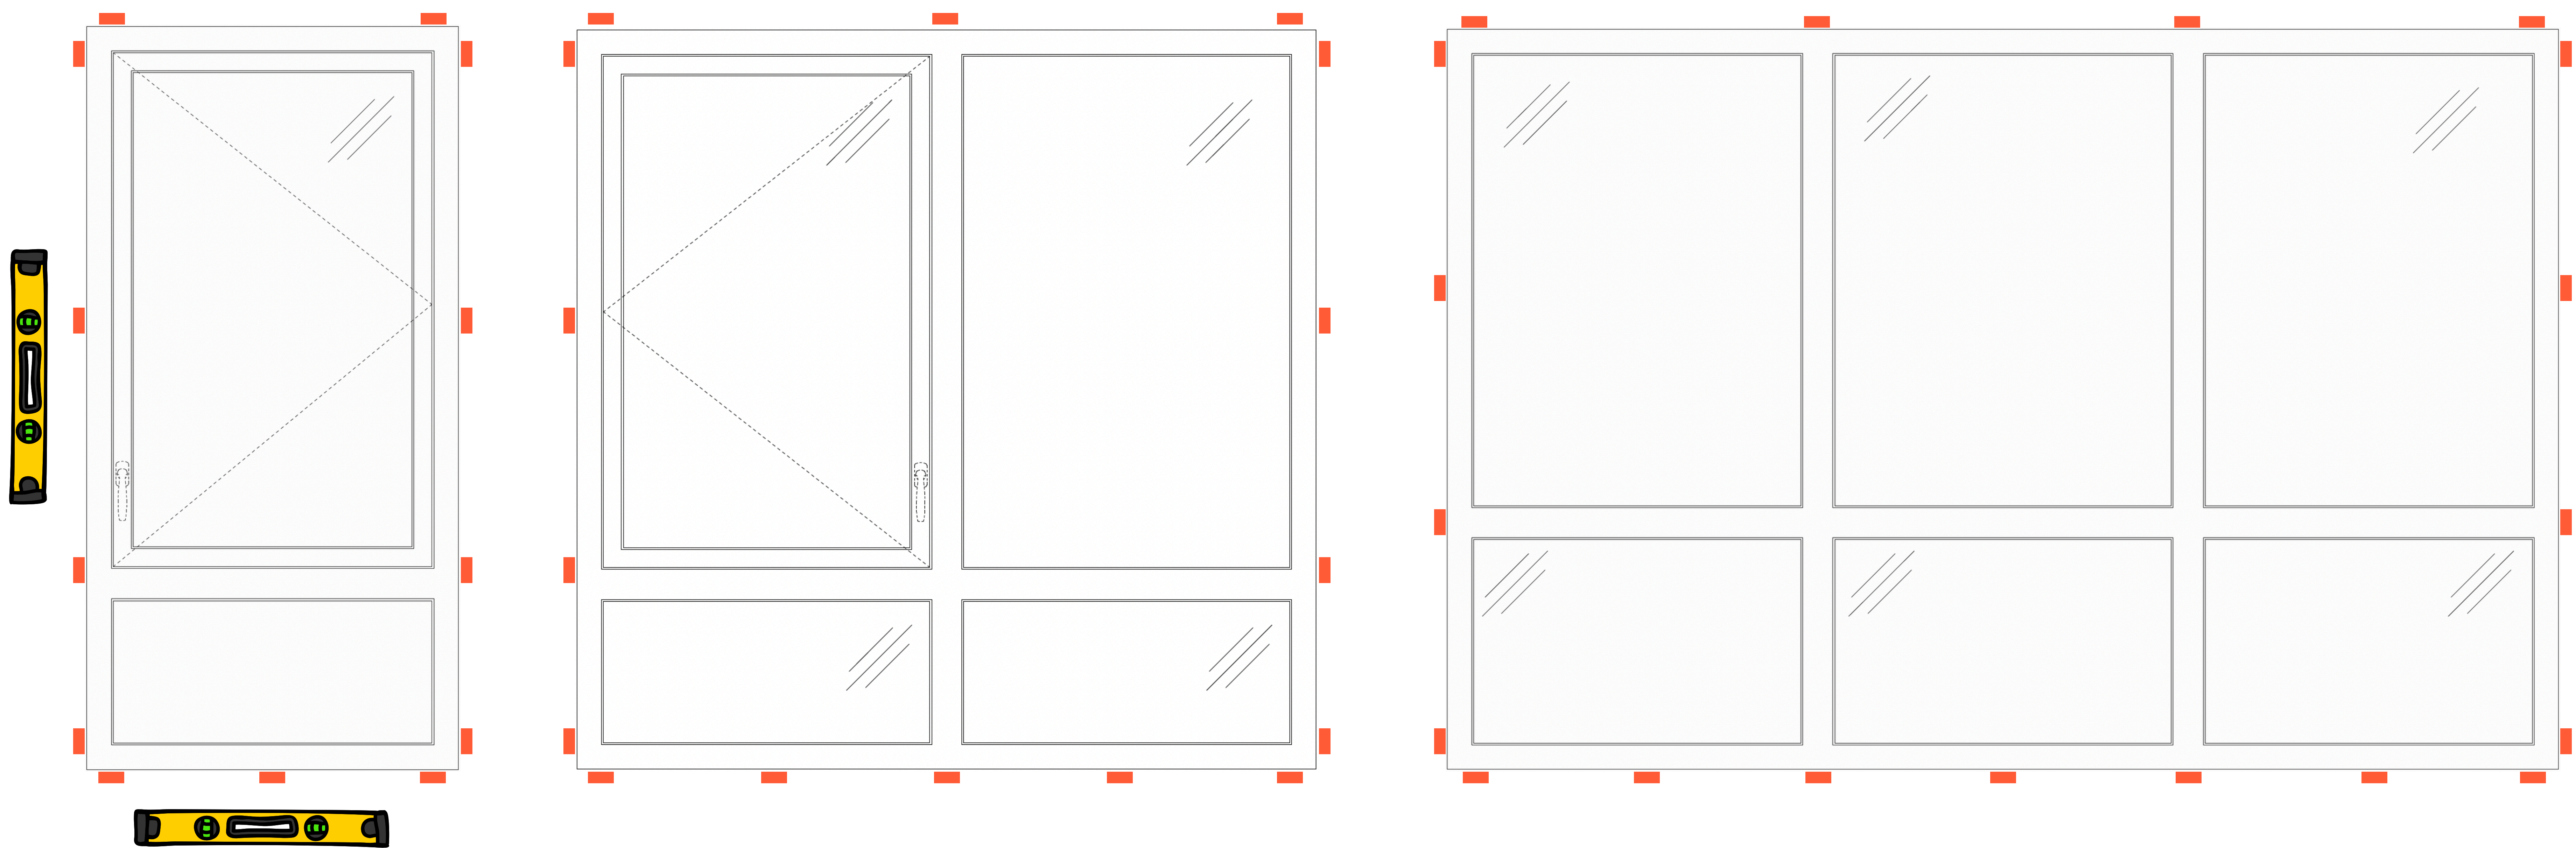


Window Installation

Nail Fin Screws


Use 1 1/2" washer head screws to fasten the nail fins into the opening

Place screws 3" from every corner, place screws every 8"

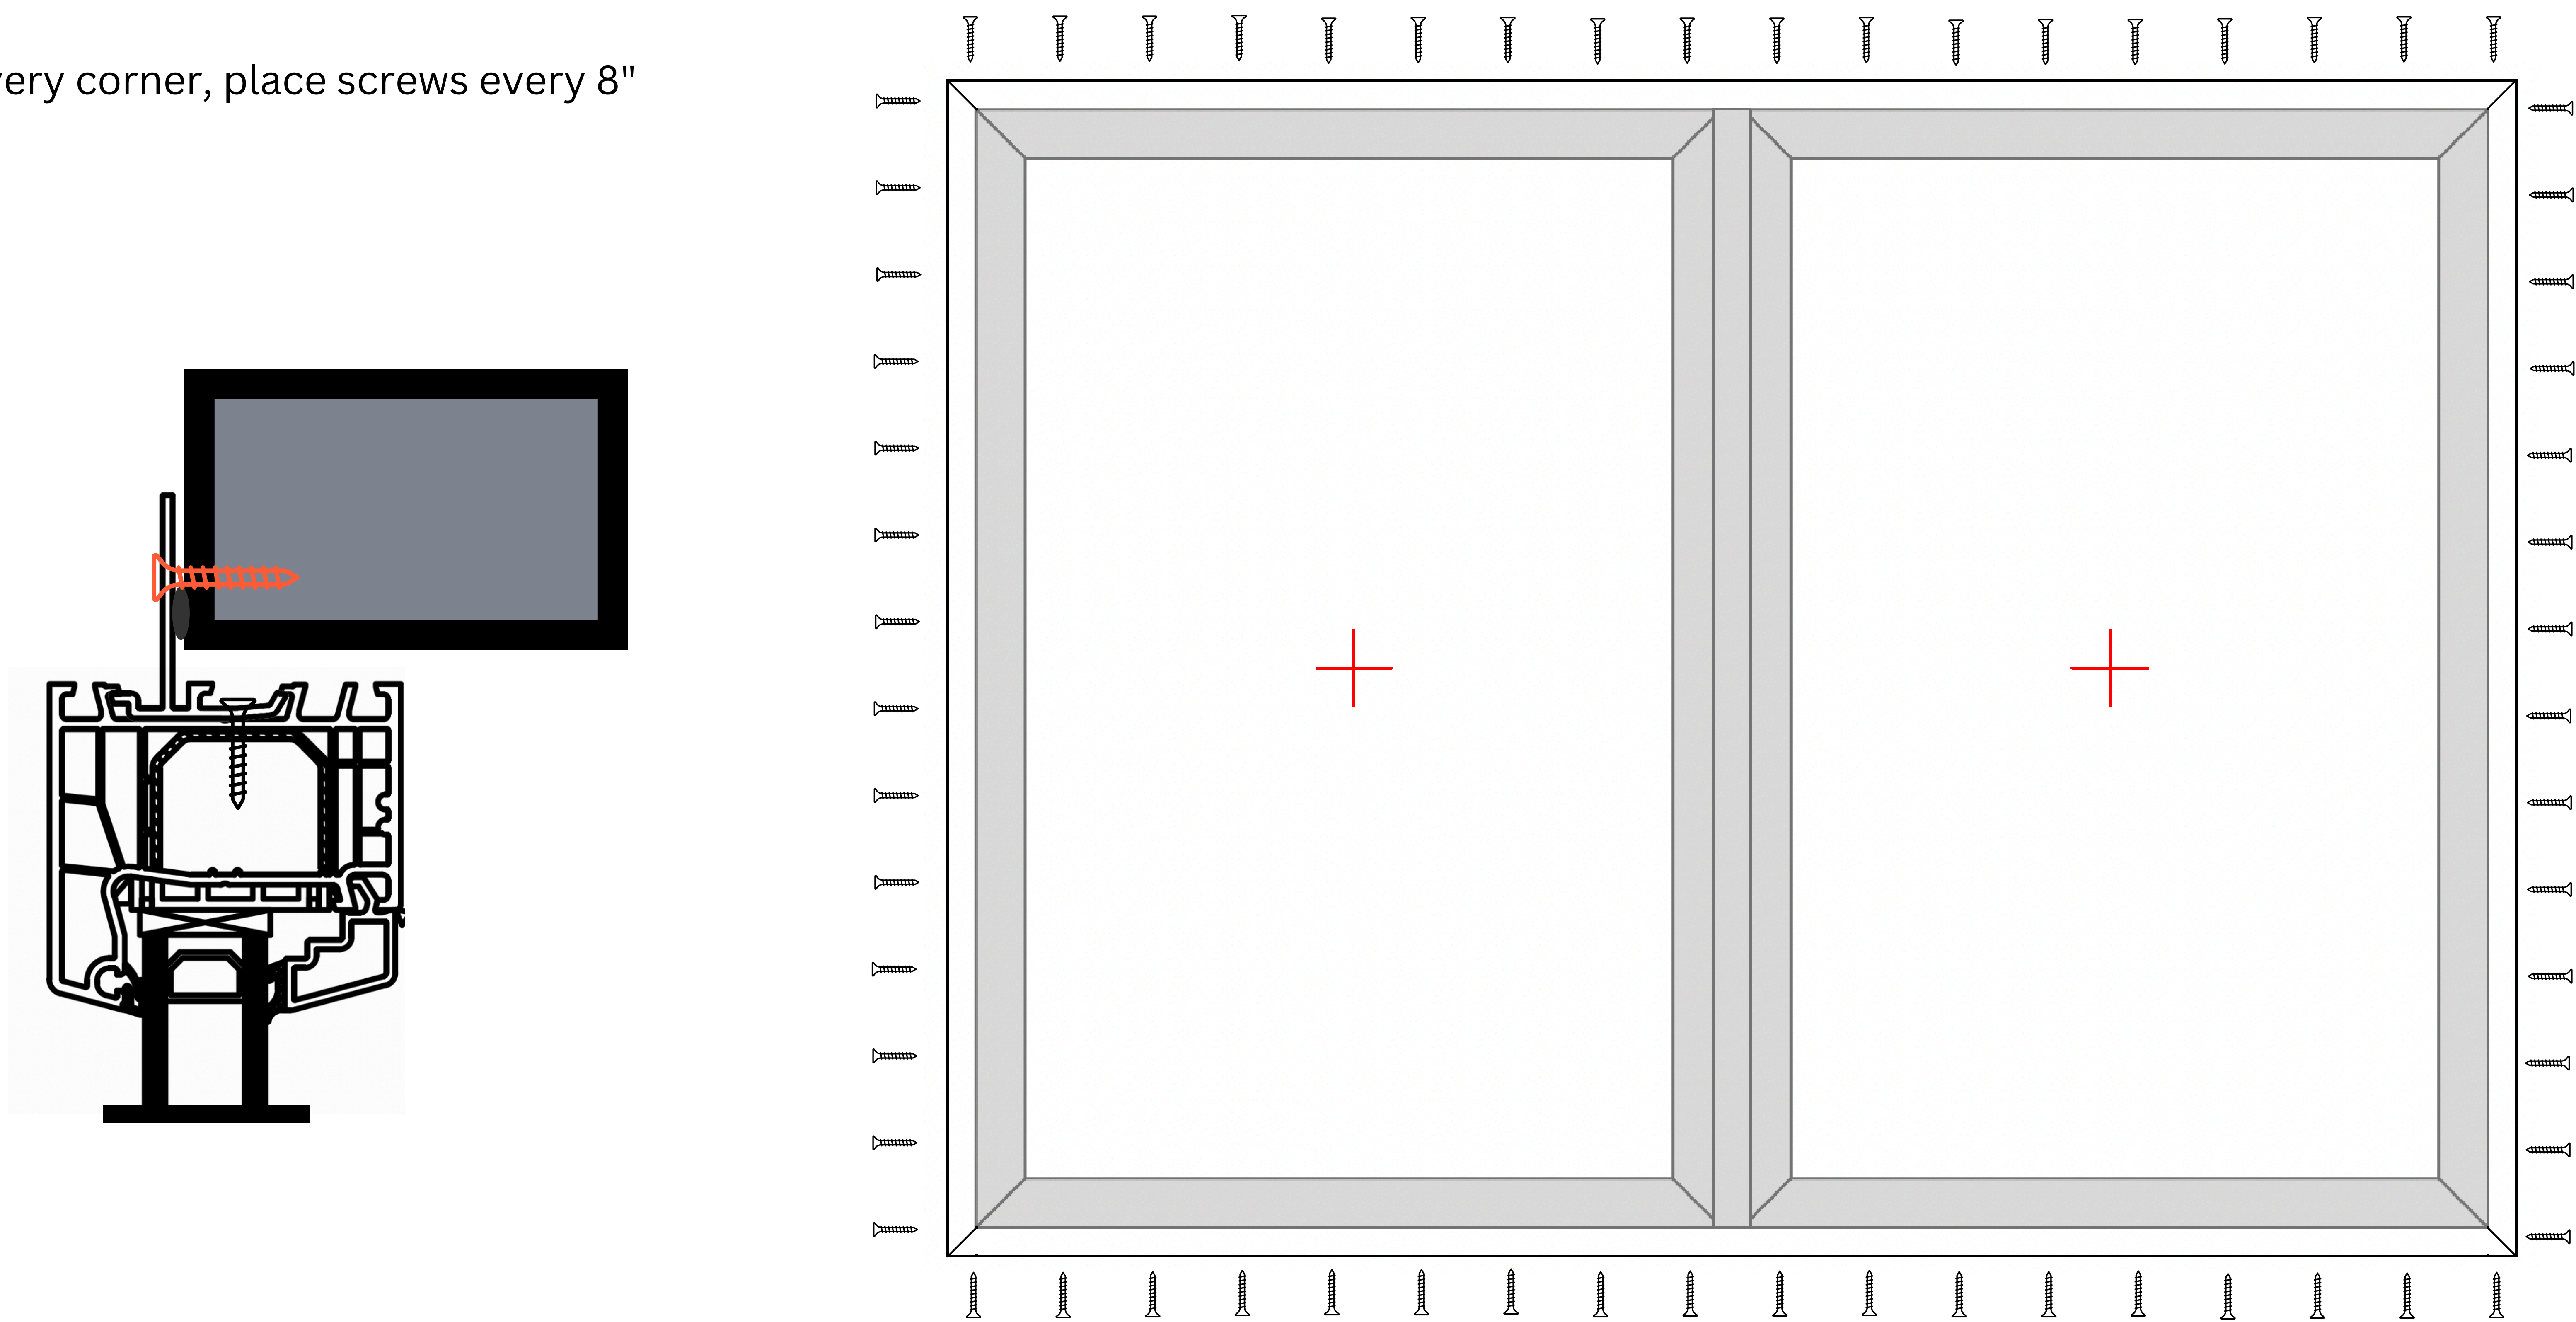

Flashing

Apply flashing tape to the sides and then to the top of the windows, overlapping the nail fins and covering the screws

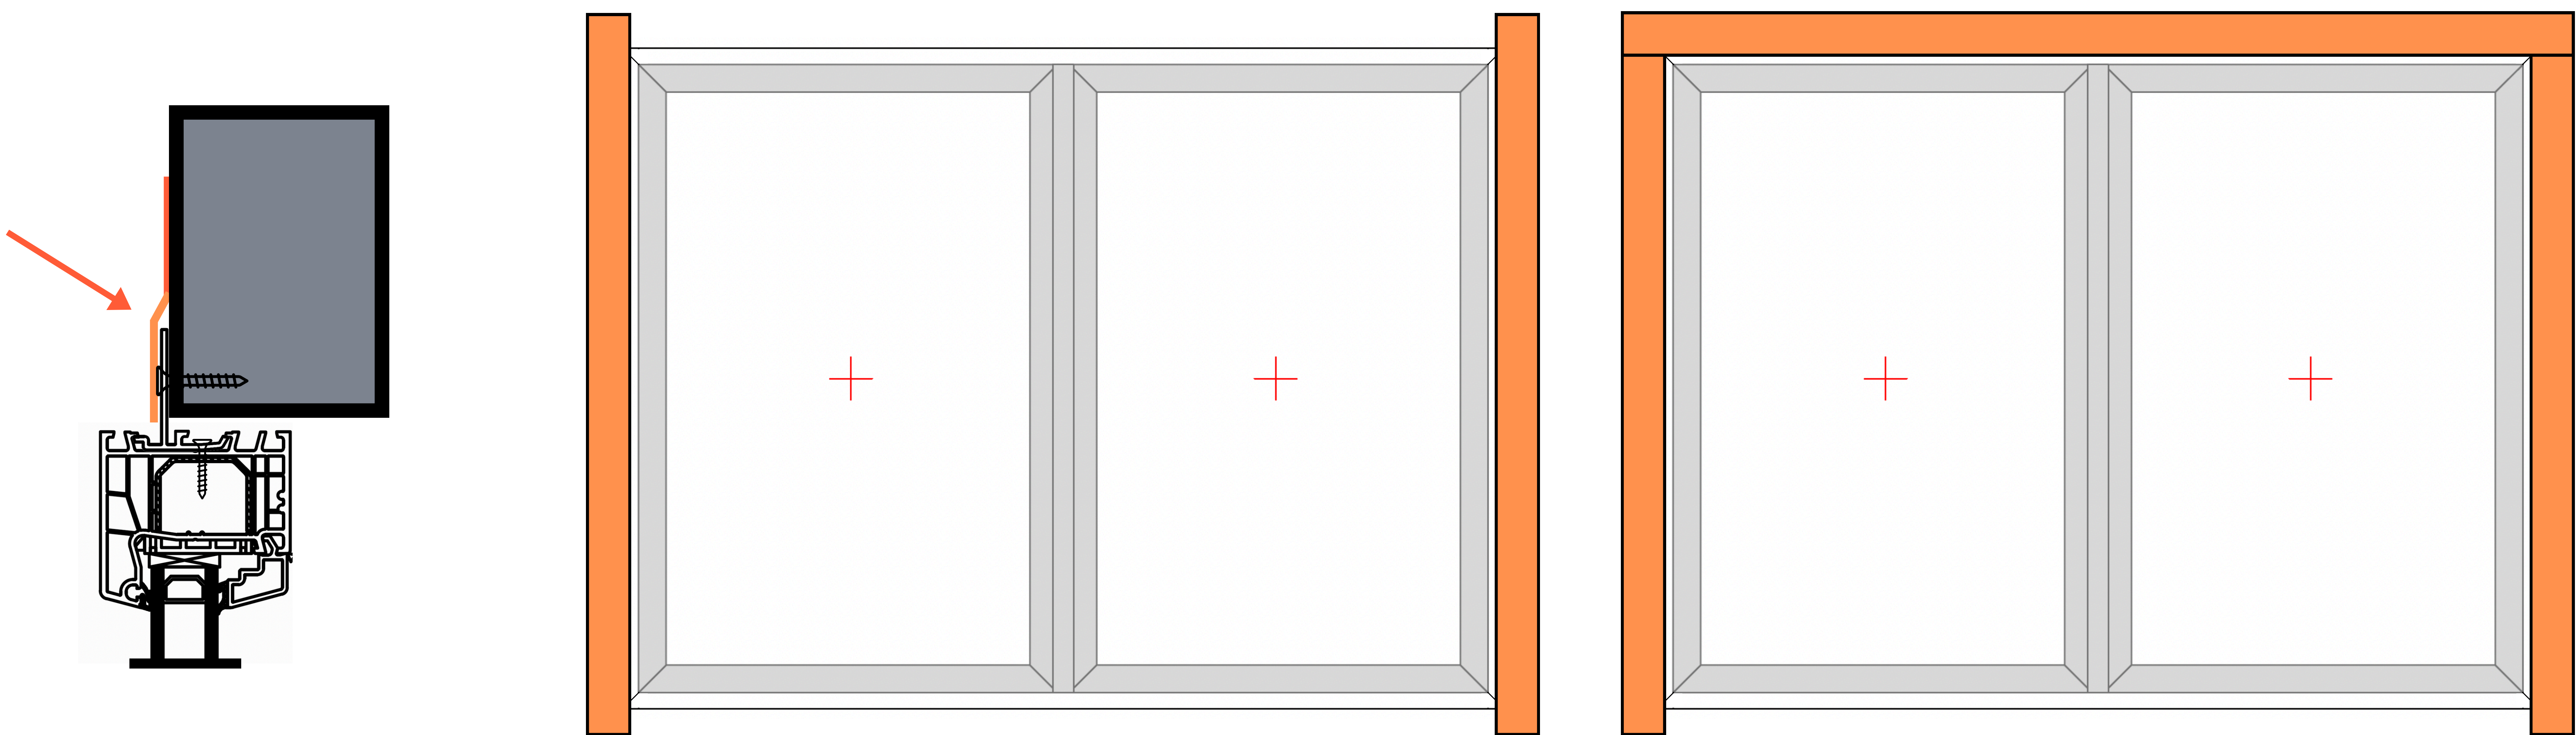

Spray Foam

Fill the rough opening with spray foam on the interior all around the window

